


# Parts List

## DH25 SHELL ASSEMBLY

1.	Firebox Assembly	
	NG	000-2626
	LP	000-2627
2.	Rear shroud	140-8908
3.	End, Left	130-1116
4.	End, Right	130-1115
5.	Top	130-1083
6.	Front	130-1105
7.	Hinge, Control Door	160-1670
8.	Control Door	130-1087
9.	Heatshield	140-8871
10.	Tab, Steel	160-1488
11.	1/4 20x3/8" Phillips Screw	120-0993
12.	1/4-20x1/2" Hex Head Screw	120-1338
13.	Washer, Wingscrew	120-2470
14.	Washer	120-2474
15.	Fender Washer	120-2527
16.	1/4-20 Wingscrew	120-1621
17.	Snap Ring	120-1987
18.	Levelling Bolt	120-1347
19.	Side Heatshield	140-9065

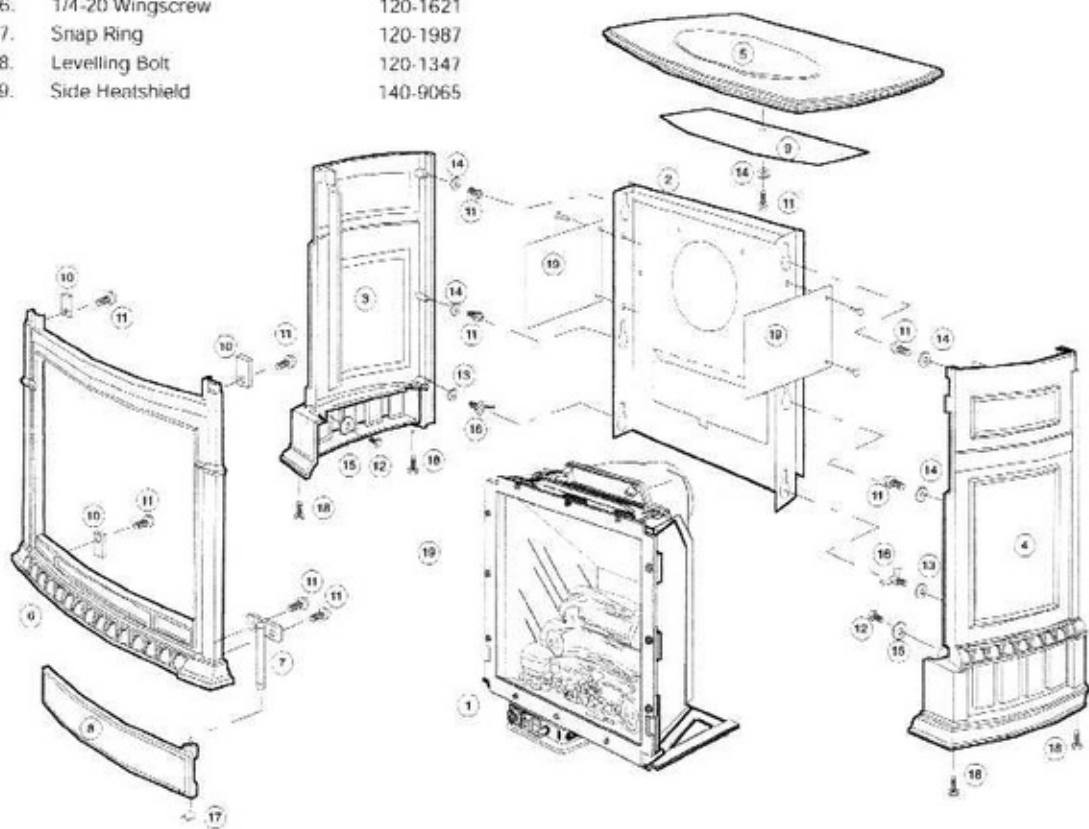

# Parts List

## DH25 FIREBOX #000-2626 (NG) AND #000-2627(LP)

*No illustration available*

1.	Firebox	130-1127
2.	Door, Heat Exchanger	130-1124
3.	Gasket, Heat Exchanger	120-3689
4.	Firebox Baffle	130-1118
5.	Flue Outlet	130-1125
6.	Air Passage	130-1126
7.	Gas Log Set	500-2984
8.	Gasket, Firebox	120-3668
9.	Glass	160-1691
10.	Gasket, Glass Panel	700-0909
11.	Frame, Glass Panel	140-8865
12.	Injector	
	Natural Gas	160-1666
	Propane	160-1668
13.	On/Off Switch	160-1597
14.	Gas Valve, LP	160-1750
	Gas Valve, NG	160-1752
15.	Bottom Heat Shield	140-8901
16.	Spacer	120-1798
17.	Reset Switch Assby.	500-3020
18.	Bottom	130-1112
19.	J tube	160-1598
20.	Burner Base	130-1096
21.	Burner Top Gasket	120-3690
22.	Burner Top	140-8864
23.	Cable, Reset Switch	120-4867
24.	Pilot Gasket	120-3685
25.	Piezo	160-1304
26.	Pilot Assembly	160-1587
27.	Pilot Conversion Kit, LP	160-1324
28.	Gas Valve Bracket	140-8906