


Encore® Non-catalytic/Catalytic Wood Burning Stove Model 2040 Replacement Parts

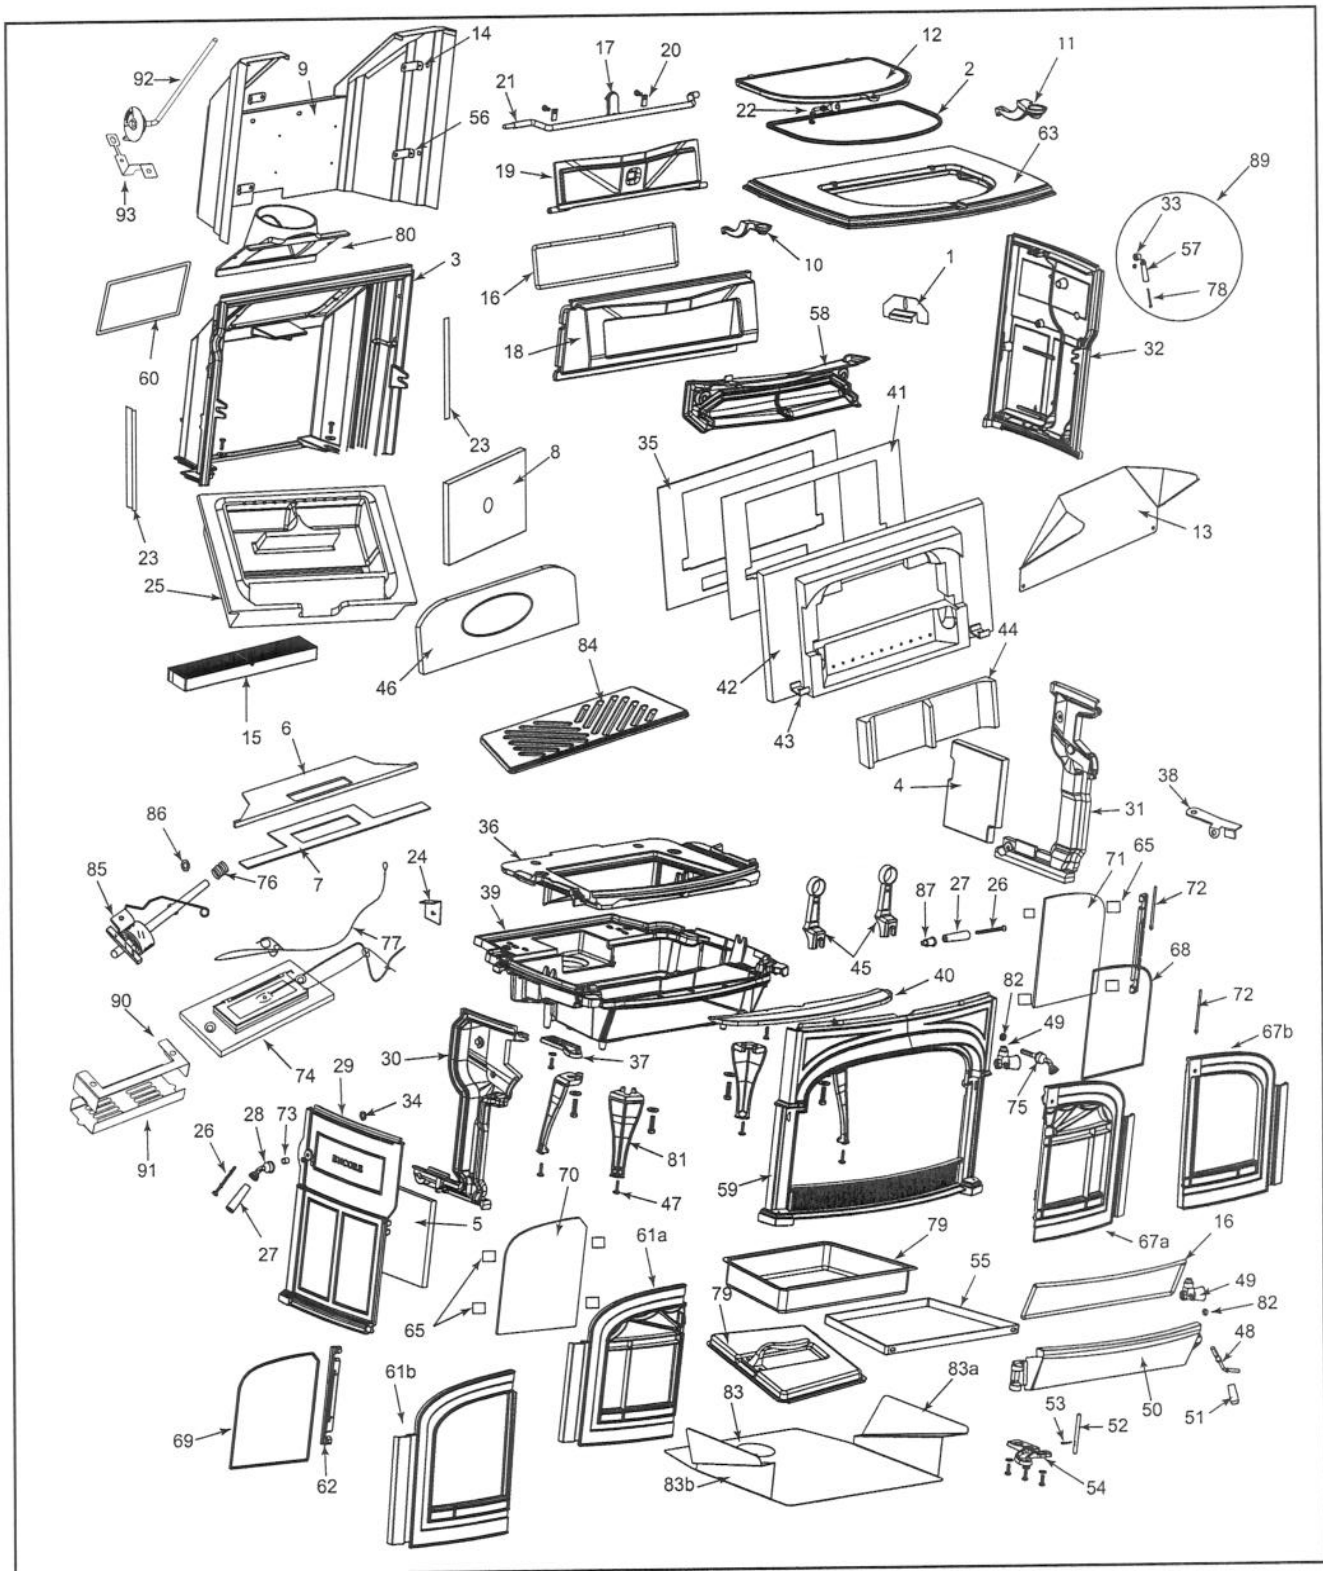

Vermont Castings Group reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

Encore® Non-catalytic/Catalytic Wood Burning Stove Model 2040 Replacement Parts (continued)

Item	Description	Part Number	Item	Description	Part Number
1.	Brick Support Bracket	30005279	57.	Thermostat Handle	1600660
2.	Griddle Gasket	1203668	58.	Front Manifold	30002407
3.	Back	30005289	59.	Front	See Chart Pg. 36
4.	Refractory Rt End	30005497	60.	Flue Collar Gasket	30002422
5.	Refractory Lt End	30005498	61a.	Left Door	See Chart Pg. 36
6.	Refractory Support	30005233	61b.	Left Door	See Chart Pg. 36
7.	Gasket, Fiber, Refractory Support	30005237	62.	Door Hinge Strip	1308634
8.	Back Insulation Board	30005269	63.	Top	See Chart Pg. 36
9.	Outer Back	30005261	65.	Glass Clip Long	1601396
10.	Left Griddle Quadrant	30002399	66.	Front Door Handle & Shaft	30002717
11.	Right Griddle Quadrant	30002401	67a.	Right Door	See Chart Pg. 36
12.	Griddle	30002386	67b.	Right Door	See Chart Pg. 36
13.	HS Flue Collar	30005266	68.	Door Gasket	1203588
14.	Bracket Upper Side	30005267	69.	Glass Gasket	1203556
15.	Catalyst, Ceramic	30005353	70.	Left Door Glass	30005300
16.	Damper Ashdoor Gasket	1203588	71.	Right Door Glass	30005299
17.	Damper Ramp	1301811	72.	Door Hinge Pin	30002727
18.	Damper Housing	30005293	73.	Spacer (for Damper rod)	1201779
19.	Damper1	30006467	74.	Primary Air Valve Assy.	30005324
20.	Damper Tab1	1601488	74a.	Primary Air Frame	1307411
21.	Damper Rod1	1600851	74b.	Primary Air Rod	30005260
22.	Griddle Handle Assy	30002775	75.	Front Door Handle and Shaft	30002717
23.	Gasket, Fiber Back Refractory	30005270	76.	Thermostat Friction Spring	1201846
24.	Rheostat Bracket	30002863	77.	Thermostat Cable	5005471
25.	Refractory, Engine - E/D	30005202	78.	Thermostat Handle Bolt	1201243
26.	Damper Handle Screw	1201310	79.	Ash Pan Assy	5005746
27.	Damper Handle	1600664	80.	Flue Collar	See Chart Pg. 36
28.	Damper Handle w/Screw Assy	30002720	81.	Leg	See Chart Pg. 36
29.	Left Side	See Chart Pg. 36	82.	Hex Head Jam Nut	1203290
30.	Left Air Manifold	30002408	83.	Bottom Heat Shield	30002470
31.	Right Air Manifold	30005290	83a.	Bottom Heat Shield Rt Wing	30005030
32.	Right Side	See Chart Pg. 36	83b.	Bottom Heat Shield Lt Wing	30005031
33.	Thermostat Handle Base	30002716	84.	Grate Bottom	30005294
34.	Washer Damper Rod	30007257	85.	Thermostat Assy.	5005470
35.	Fireback Plate, S/S	30005217	86.	Washer	1202471
36.	Inner Bottom	30005291	87.	Handle Base Stub	30002714
37.	Ashdoor Hinge Upper	30002403	88.	Fallaway Handle Complete	30004175
38.	Door Handle Bracket	30002909	89.	Thermostat Handle Assembly	30007067
39.	Bottom Outer	30005292	90.	Primary Air Cover	30007069
40.	Ashlip	See Chart Pg. 36	91.	Primary Air Base	30007071
41.	Gasket, Fireback	30005209	92.	Temperature Probe	30007274
42.	Refractory, Fireback	30005302	93.	Bracket, Temperature Probe	30007278
43.	Retainer, Fireback Refractory	30005248			
44.	Refractory, Inner Cover	30005205			
45.	Andiron	30002397			
46.	Refractory, Access Cover	30007251			
47.	Leg Leveller	1201745			
48.	Ashdoor Handle Shaft	1600622			
49.	Pawl Assy	30005157			
50.	Ashdoor	30002392			
51.	Ashdoor Handle (Wood)	1600663			
52.	Ashdoor Hinge Rod	30007285			
53.	Cotter Pin, Ashdoor	30001749			
54.	Ashdoor Hinge Lower	30002404			
55.	Ashpan Bracket	1601039			
56.	Lower Side Bracket	30005268			

Encore® Non-catalytic/Catalytic Wood Burning Stove Model 2040 Replacement Parts (continued)

SHELL ENAMEL PARTS: ENCORE® MODEL 2040							
Part Name	Classic Black	Biscuit	Bordeaux	Ebony	Majolica Brown	Midnight Blue	Twilight
Top	30002387	30003055	30006682	30003075	30004879	30002635	30007030
Left Side	30002388	30003052	30006679	30003072	30004876	30002633	30007027
Right Side	30002405	30003053	30006680	30003073	30004877	30002632	30007028
Flue Collar	1305050	30003160	30006683	30003162	30004873	2375050	30007031
Front	30002393	30003054	30006681	30003074	30004878	30002634	30007029
Ashlip	30002402	30003051	30006678	30003071	30004875	30002630	30007026
Left Door Sub Assembly*	30003974	30003984	30006687	30003988	30004882	30003980	30007072
Left Door (61a)	30003938	30003958	30006685	30003962	30004884	30003954	30007033
Right Door Sub Assembly*	30003975	30003985	30006686	30003989	30004881	30003981	30007073
Right Door (67a)	30003939	30003959	30006684	30003963	30004883	30003955	30007032
Single Leg	30002396	30003050	30006677	30003070	30004874	30002631	30007025

TRANSITION DOOR ENAMEL PARTS: ENCORE® MODEL 2040					
Part Name	Classic Black	Biscuit	Bordeaux	Majolica Brown	Twilight
Left Door Assembly	30007165	30007167	30007169	30007171	30007173
Left Door (61b)	30007081	30007083	30007087	30007085	30007107
Right Door Assembly	30007166	30007168	30007170	30007172	30007174
Right Door (67b)	30007080	30007082	30007086	30007084	30007106

*Does not contain glass or glass gasket.

NOTES:

In the diagram and throughout this manual, 'left' and 'right' mean as you face the stove.

When ordering parts, be sure to mention the stove's model number. When ordering external parts, be sure to specify color.

The hardware in the Encore® is in standard sizes; most bolts are 1/4" diameter by 20 threads per inch. Most hardware stores can supply replacement hardware if you specify bolt diameter, number of threads per inch and length. Fasteners inside the firebox should be replaced with stainless steel for ease of future disassembly.